

Vinyl Window Graphics

Installation Guide – Wet Application Method

NOTE: Vinyl graphics should be installed by a professional installer.

Your vinyl graphic arrives to you with three layers:

1. The top layer is the application tape.
2. The middle layer is the self-adhesive vinyl graphic.
3. The bottom layer is the backing paper.

**The vinyl graphic should be applied in a wind-free environment at room temperature. It will not adhere if it is too cold.*

Installation Questions?

Call our customer service team at
888.273.8726



Tools Required:

- ☐ Squeegee (included)
- ☐ 4 oz. Bottle of Rapid Tac (included)
- ☐ Soft Cloth
- ☐ Masking Tape
- ☐ Level
- ☐ Tape Measure
- ☐ Wax Pencil

Preparation:

1. The surface must be thoroughly cleaned and free of all oils, waxes, dust, and dirt a few minutes in advance of installation.
2. On a flat table, with the application tape side up, use your squeegee to wipe over the whole of the vinyl graphic using plenty of pressure. This will stick the vinyl graphic to the application tape and release it from the backing paper.
3. Mark guidelines to the surface of the substrate with the wax pencil.

Example Only:
Graphic will vary based on brand

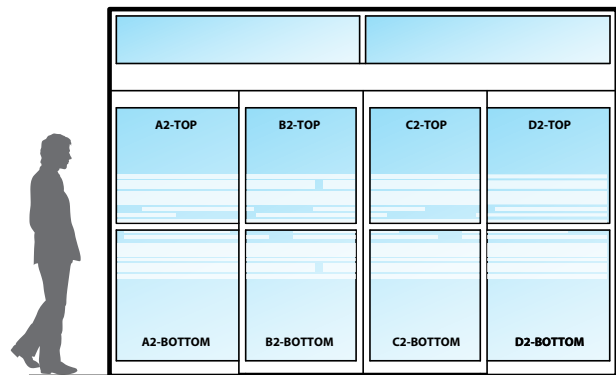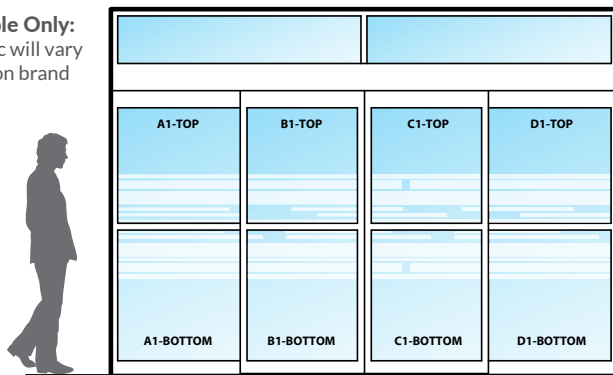

Installation Instruction:

4. With the vinyl graphic face down on a flat surface, carefully peel off the backing paper away from the vinyl graphic.
5. Spray generously the area where the vinyl graphic is to be applied with your Rapid Tac wetting solution. Spray the vinyl graphic lightly.
6. Place the vinyl graphic on the prepared surface using the guidelines to help position it. The vinyl graphic can be removed and repositioned as long as the surface stays wet.
7. When you are happy with the position, use your squeegee to force the bubbles and fluid out. Start at the center and work your way out. Be sure to squeegee as much solution as possible from under the vinyl graphic. Take your time, because if not enough solution is removed from under the vinyl graphic, it will not adhere to the surface.
8. Allow to dry for about an hour.
9. Gently and slowly peel back the application tape diagonally, keeping the squeegee on the vinyl graphic as you remove the application tape from the vinyl graphic to prevent it from pulling back up. Note: if the vinyl graphic is not sticking to the surface, repeat the squeegee process and let dry longer.
10. Remove any remaining bubbles and fluid with a soft cloth and leave to dry for a couple of hours.

